



Transcend Wi-Fi SD Card Compatibility List

2017/10/19

1. This Transcend Wi-Fi SD Card Compatibility List only provides the devices which basic function may be compatible with Transcend Wi-Fi SD Card, and is effective upon its release on Transcend official website. Transcend reserves the right to update this List from time to time.

2. There is no guarantee that Transcend Wi-Fi SD Card is compatible with all devices having SD Card host, or all the functions of listed devices are supported by Transcend Wi-Fi SD Card.

3. For more information about our warranty policy, please check Transcend Warranty Policy.

[Transcend Warranty Policy](#)

Compatible

Canon
Model name
EOS 1D Mark IV
EOS 60D
EOS 7D Mark II
EOS Kiss X2 / EOS Digital Rebel XSi / EOS 450D
EOS Kiss X3 / EOS Rebel T1i / EOS 500D
EOS Kiss X5 / EOS Rebel T3i / EOS 600D
EOS Kiss X7 / EOS Rebel SL1 / EOS 100D
EOS Kiss X7i / EOS Rebel T5i / EOS 700D
EOS M
EOS M3
IXUS 145
IXY 10S / PowerShot SD3500 IS / IXUS 210
IXY 200F / PowerShot SD1300 IS / IXUS 105
IXY 210F / PowerShot ELPH 100 HS / IXUS 115 HS
IXY 220F / PowerShot ELPH 110 HS / IXUS 125 HS
IXY 30S / PowerShot SD4000 IS / IXUS 300 HS
IXY 31S / PowerShot ELPH 500 HS / IXUS 310 HS
IXY 400F / PowerShot SD1400 IS / IXUS 130
IXY 50S / PowerShot SD4500 IS / IXUS 1000 HS
IXY 51S / PowerShot ELPH 510 HS / IXUS 1100 HS
IXY 600F / PowerShot ELPH 310 HS / IXUS 230 HS
IXY DIGITAL / PowerShot S100
PowerShot A2400 IS
PowerShot A3000 IS
PowerShot A3400 IS

PowerShot A4000 IS

PowerShot A495

PowerShot D20

PowerShot G12

PowerShot G15

PowerShot SX150 IS

PowerShot SX210 IS

PowerShot SX230 HS

PowerShot SX240 HS

PowerShot SX260 HS

PowerShot SX40

PowerShot SX500 IS

PowerShot SX710 HS

Casio

Model name

EX-H5

EX-S200

EX-TR100

EX-TR150

EX-TR200

EX-Z2000

EX-Z350

EX-Z800

EX-ZR1000

EX-ZR1200

EX-ZR1500

EX-ZR200

Fujifilm

Model name

FinePix AV130

FinePix AV200

FinePix F500EXR

FinePix F770EXR

FinePix F80EXR

FinePix HS10
FinePix HS20EXR
FinePix HS25EXR
FinePix HS50EXR
FinePix S2800HD
FinePix SL300
FinePix X100/X100S
FinePix XP10/XP11
FinePix XP50
FinePix Z700EXR
FinePix Z900EXR
FUJIFILM XF1
FUJIFILM X-Pro1
FUJIFILM X20
FUJIFILM X-E1

JVC
Model name
GC-PX10

Nikon
Model name
1 J1
1 J2
1 J3
1 V1
1 V2
Coolpix A
Coolpix AW100
Coolpix L25
Coolpix L810
Coolpix P310
Coolpix P500
Coolpix P510
Coolpix P530
Coolpix P7700

Coolpix S1100pj

Coolpix S2800

Coolpix S30

Coolpix S4000

Coolpix S4300

Coolpix S8200

Coolpix S9100

Coolpix S9200

Coolpix S9300

Coolpix S9400

Olympus

Model name

E-5

E-P3

E-PL2

E-PL5

SP-810UZ

TOUGH TG-610

TOUGH TG-810

VG-170

XZ-1

XZ-10

XZ-2

Pentax

Model name

K-01

K-30

K-5 II

K-R

Optio VS20

Optio WG-3

Q

X-5

Samsung

Model name

PL20

Sigma

Model name

DP2M

Sony

Model name

DSC-HX200V

DSC-HX300

DSC-RX100

DSC-W380

DSC-W810

DSLR- α 57

DSLR- α 65

DSLR- α 77

DSLR- α 99

NEX-3

NEX-3N

NEX-5

NEX-5R

NEX-6

NEX-C3

NEX-F3

Incompatible

*Because the Wi-Fi SD card consumes more power than a normal SD card, some cameras may not provide sufficient power in certain shooting modes. To avoid any possible errors, we suggest that you DO NOT use the Wi-Fi SD card with the cameras listed below.

Canon

Model name

EOS kiss X50 / EOS Rebel T3 / EOS 1100D

EOS Kiss X4 / EOS Rebel T2i / EOS 550D

EOS 6D

EOS Kiss X6i / EOS Rebel T4i / EOS 650D

IXY DIGITAL 200 / PowerShot S110 / DIGITAL IXUS v

PowerShot A2500

PowerShot G1 X

PowerShot G9

Powershot S95

PowerShot SX100 IS

PowerShot SX20 IS

PowerShot SX50 HS

Casio

Model name

EX-Z2

EX-H30

Fujifilm

Model name

FUJIFILM X10

FUJIFILM X-S1

GoPro

Model name

HD HERO

HD HERO2

Leica

Model name

M9

V-LUX 30

Nikon

Model name

Coolpix P7000

Coolpix S8000

D300S

D3100

D3200

D5100

D5200

D600

D610

D7000

D7100

D800/D800E

D90

Olympus

Model name

OM-D E-M5

SH-25MR

Panasonic

Model name

DMC-F3

DMC-FH20

DMC-FH3

DMC-FP1

DMC-FP3

DMC-FX68

DMC-FX700

DMC-FZ100

DMC-G2

DMC-G5

DMC-G5X

DMC-GF2

DMC-GF3

DMC-GF5

DMC-GX1

DMC-S1

DMC-TS2

DMC-ZS7

Pentax

Model name

K-5

Ricoh

Model name

CX4

CX5

GR Digital IV

PX

Samsung

Model name

NX200

Sony

Model name

DSC-HX5V

DSC-TX100V

DSC-TX110

DSC-TX5

DSC-TX7

DSC-TX9

DSC-WX5

DSC-WX7

DSLR-α55

NEX-5N

NEX-7